

## CAD – Locution Fire

### Interface Setup

Interface for Locution Fire Station product.

There are only two parts for this interface.

#### #1. Add New Fire Station(s) to the Station Picklist

On Each Station, under the interface section, add the Interface Name and Connection Information

Ex: Interface = LOCUTION (required to be this exactly)

Ex: Interface Description = IP Address and Port # Of the Locution Listing Server

You will need to get with your Internal Network Group to Open needed firewall ports.

Reporting Column:	Code Ranking:	Max Value(Pod/Assessment):	Near:
0	0	0	0

Able To Bond  Evidence Out Of Facility  Jail Classification State C


Interface	Assignments
Interface: LOCUTION	Interface Description: 10.8.5.14:4999
General Interface Code(Titan):	Phone Interface Code:

#2. On Maintain Units, update each Fire Unit with their Correct Station they are connected to.

Maintain Cad Unit, Search for your Fire Department using Locution.



Select the 1<sup>st</sup> from the list

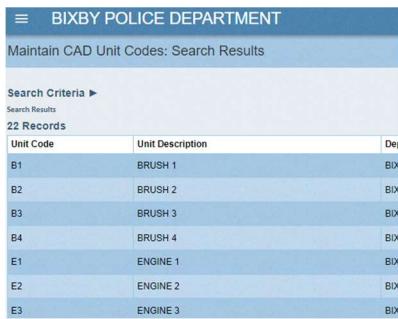

On the Last Tab – Dispatching, Select the Station this Unit is connected to and click Save.

